



XS WIRELESS 2

Quick Guide | Kurzanleitung | Guide rapide | Guida rapida | Guía de inicio rápido | Guia rápido | Beknopte handleiding | Krótka instrukcja obsługi | Snabbguide | Kort vejledning | Pikaohje | Γρήγορος οδηγός | Kısa Kılavuz | Краткая инструкция | 快速指南 | 快速使用指南 | クイックガイド | 요약 설명서

In the box	Vocal Sets		Instrument Set	Lavalier Set	Headmic Set
	XSW 2-835	XSW 2-865	XSW 2-CI1	XSW 2-ME2	XSW 2-ME3
XS WIRELESS 2 	•	•	•	•	•
EM-XSW 2 	•	•	•	•	•
NT 12-5CW 	•	•	•	•	•
SKM 835-XSW 	•	○	○	○	○
MZQ 1 SKM 865-XSW 	○	•	○	○	○
SK-XSW 	○	○	•	•	•
ME 2-2 	○	○	○	•	○
ME 3-II 	○	○	○	○	•
CI 1-N 	○	○	•	○	○
2 x AA LR6 1.5 V 	•	•	•	•	•

Battery

- Slide the battery cover open.
- Insert the battery with the correct polarity.
- Slide the battery cover closed.

Low battery

Receiver display: 606.5 MHz, B. I.

Transmitter display: Bank 1, Ch. 1, 606.500 MHz

	~ 10 h
	~ 7 h
	~ 3 h
	Low Batt

Setup

Line Mic: XLR-3 or 6.3 mm

Power: EU, US, UK, AU, CN, KOR

On/Off

1s on, 3s off

OR

Display

Labels: Audio level, Frequency, Diversity, Radio frequency level, Menu, Sync, Battery, Bank, Channel

Volume

Mute


Audio on

Audio off

Sennheiser electronic GmbH & Co. KG

Am Labor 1, 30900 Wedemark, Germany, www.sennheiser.com
 Printed in Germany, Publ. 02/17, 571344/A03

Change frequency



SET

Scan mode

SKM/SK Off!

606.500 MHz
B. 1 CH. 01

+ Bank
- Bank

SET

615.400 MHz
B. 2 CH. 03

SET

SET

Preset mode

606.500 MHz
B. 1 CH. 01

+ Bank
- Bank

SET

606.500 MHz
B. 2 CH. 01

+ Channel
- Channel

SET

615.400 MHz
B. 2 CH. 03

SET

SET

Tune mode

Bank U only!

606.000 MHz
B. U CH. 00


+ 25 kHz
- 25 kHz

SET


606.025 MHz
B. U CH. 00

SET


Sensitivity

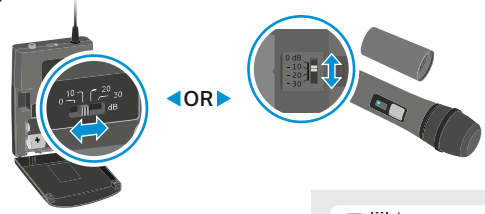

- 0 dB
- 10 dB
- 20 dB
- 30 dB

 


ME 2-2




25 cm (10")

ME 3-II

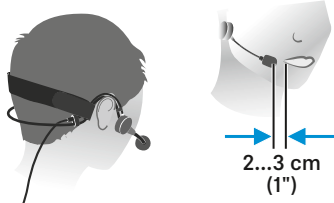


2...3 cm (1")


Squelch




min. SQ

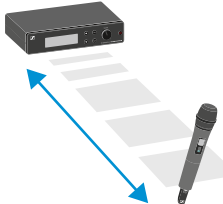

max. SQ



Sync

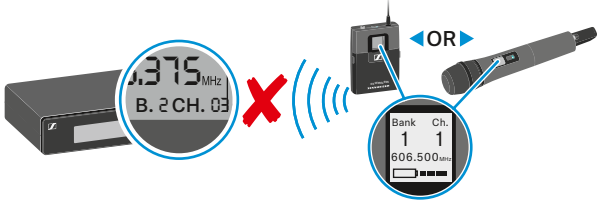

606.375 MHz
B. 2 CH. 03



Bank 1 Ch. 1
606.500 MHz

1 hold

2 hold

OR

2x





606.375 MHz
B. 2 CH. 03

Bank 2 Ch. 3
615.400 MHz

Multichannel


Bank 1...8; U
CH. 01...12

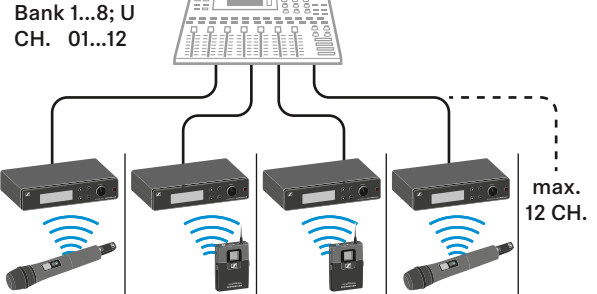

max. 12 CH.


Bank	CH.	Bank	CH.	Bank	CH.	Bank	CH.	
2	3	2	4	2	5	2	6	✓
1	1	1	2	1	3	1	8	✓
2	3	1	3	4	7	8	9	✗
2	3	2	3	2	3	2	3	✗

Min. distance




> 5 m (16'5")

SKM

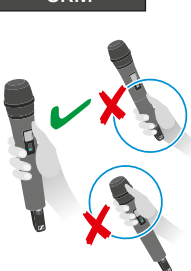

Guitar pickup



> 20 cm (8")

